


Ersatzteile - Spare parts - Pièces de rechange - Reserveonderdelen - Parti di ricambio - Reservedele - Reservdelar  
 Varaosat - Części zamienne - Náhradní díly - Alkatrészek - Piese de schimb - Запасные части - 备件

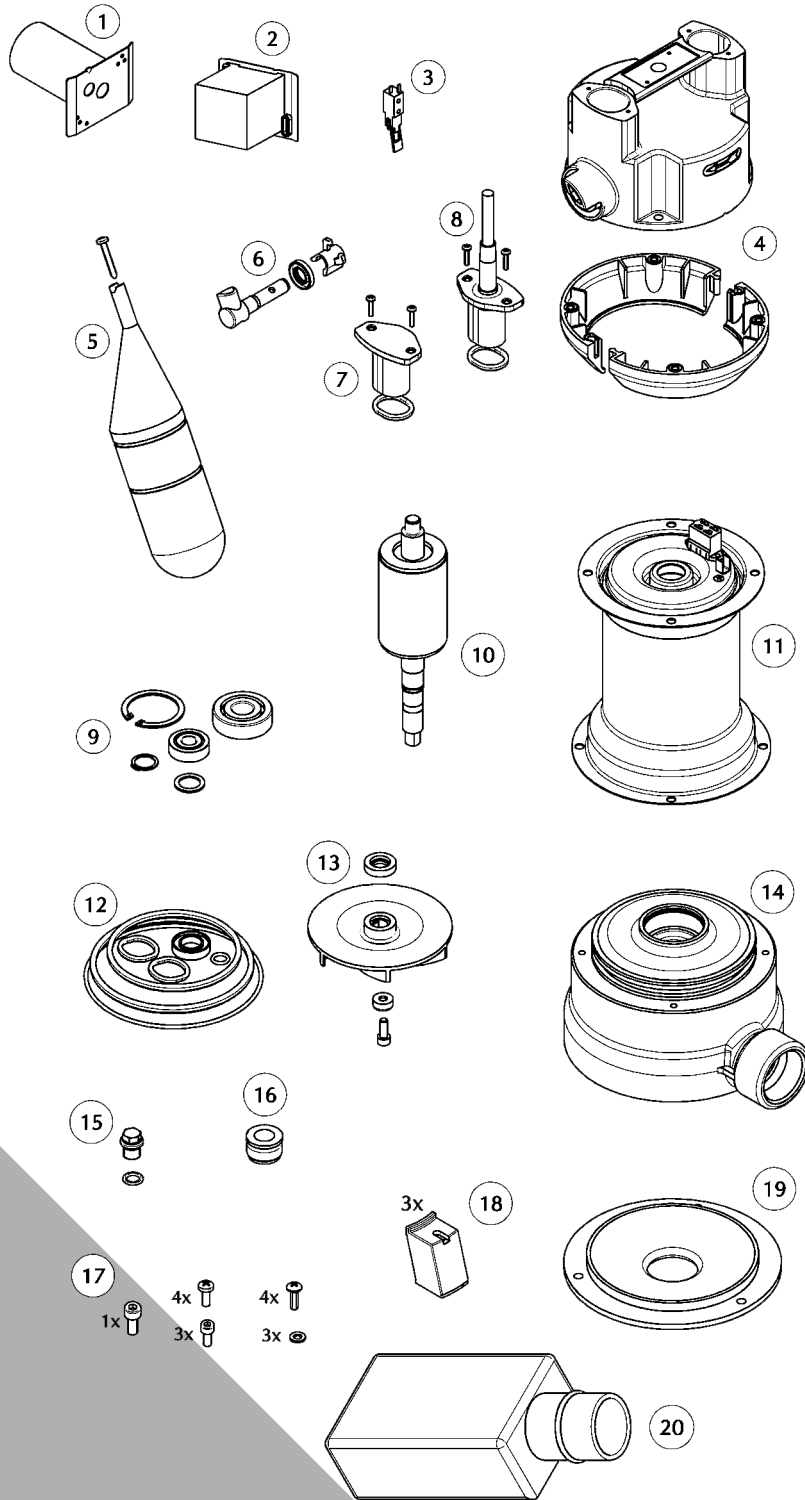

①	Kondensator 73 103 153	Capacitor	<b>JP46015</b> <b>JP46016</b> <b>JP46017</b>
②	Schalterschütz	Contacteur	<b>JP46056</b>
③	Mikroschalter ES DS	Microswitch	<b>JP46351</b> <b>JP46352</b>
④	Haube ES, DS E, D	Top cover	<b>JP46018</b> <b>JP46019</b>
⑤	Schwimmer	Float	<b>JP46022</b>
⑥	Schaltwelle HE, HES	Switch shaft	<b>JP46020</b> <b>JP46021</b>
⑦	Schalterpatrone	Switch cartridge	<b>JP46025</b>
⑧	Leitung 73 E/ES, 103 E/ES 73 D/DS, 103 D/DS 73 HE, 103 HE 153 E/ES 153 D/DS with A/NZ plug ES	Cable	<b>JP42777</b> <b>JP42779</b> <b>JP46980</b> <b>JP46013</b> <b>JP46014</b> <b>JP47221</b>
⑨	Lagersatz	Bearing set	<b>JP46042</b>
⑩	Rotorwelle 73 E, HE 73 D 103 E, HE 103 D 153 E 153 D	Rotor shaft	<b>JP46035</b> <b>JP46036</b> <b>JP46037</b> <b>JP46038</b> <b>JP46039</b> <b>JP46040</b>
⑪	Stator + Gehäuse 73 E 73 D 73 HE 103 E 103 D 103 HE 153 E 153 D	Stator + Housing	<b>JP46027</b> <b>JP46028</b> <b>JP46033</b> <b>JP46029</b> <b>JP46030</b> <b>JP46034</b> <b>JP46031</b> <b>JP46032</b>
⑫	Dichtungssatz	Seal set	<b>JP46041</b>
⑬	LaufRad 73 103 153 E 153 D	Impeller	<b>JP46052</b> <b>JP46053</b> <b>JP46054</b> <b>JP46055</b>
⑭	Pumpengehäuse	Pump casing	<b>JP46044</b>
⑮	Ölschraube	Oil screw	<b>JP46046</b>
⑯	Gleitringdichtung	Mechanical seal	<b>JP46043</b>
⑰	Schraubensatz	Screw set	<b>JP46263</b>
⑱	FüÙe HE	Feet	<b>JP46047</b> <b>JP46049</b>
⑲	Deckel	Cover	<b>JP46050</b>
⑳	Motorschutz 153 ES 153 DS	Motor protection Schuko-plug CEE-plug	<b>JP40264</b> <b>JP44750</b>
㉑	1l Öl	1l Oil	<b>JP48236</b>